


Services|UPS

Below an overview of the ups setup page you can find on menu Services > UPS:

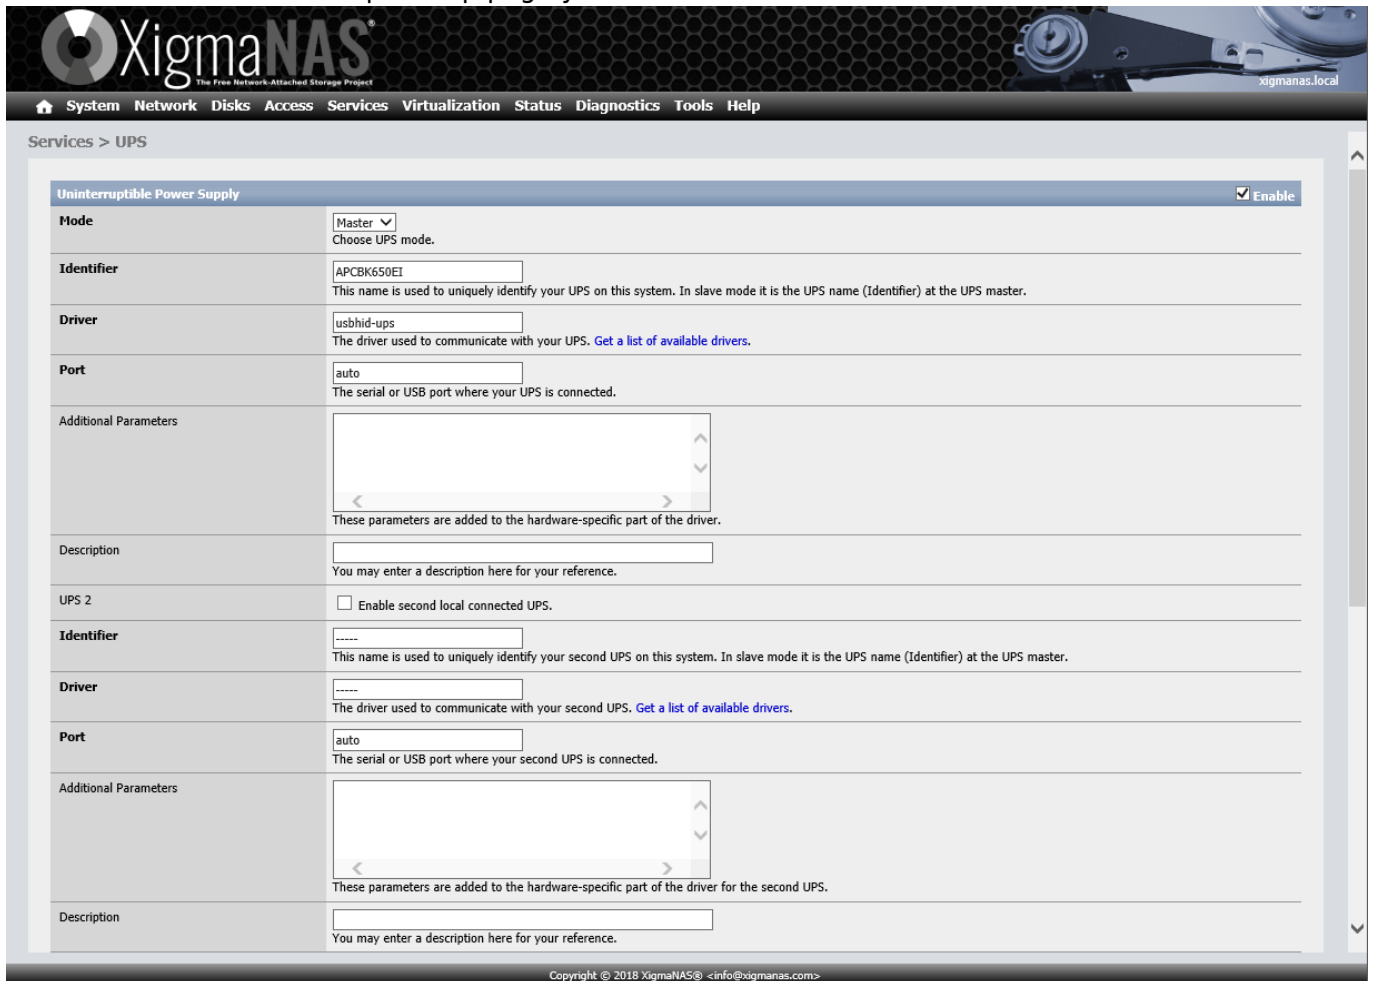

The screenshot shows the XigmaNAS web interface for configuring the Uninterruptible Power Supply (UPS). The page title is "Services > UPS". At the top, there is a navigation menu with items: System, Network, Disks, Access, Services, Virtualization, Status, Diagnostics, Tools, and Help. The main content area is titled "Uninterruptible Power Supply" and includes an "Enable" checkbox which is checked. The configuration is divided into two sections: "UPS 1" and "UPS 2".

UPS 1 Configuration:

- Mode:** Master (dropdown menu)
- Identifier:** APCBK650EI (text input)
- Driver:** usbhid-ups (text input)
- Port:** auto (text input)
- Additional Parameters:** (empty text area)
- Description:** (empty text input)

UPS 2 Configuration:

- Enable second local connected UPS:** (unchecked checkbox)
- Identifier:** ---- (text input)
- Driver:** ---- (text input)
- Port:** auto (text input)
- Additional Parameters:** (empty text area)
- Description:** (empty text input)

Copyright © 2018 XigmaNAS® <info@xigmanas.com>

From: <https://www.xigmanas.com/wiki/> - XigmaNAS

Permanent link: https://www.xigmanas.com/wiki/doku.php?id=documentation:setup_and_user_guide:services_ups

Last update: 2018/07/08 16:57

